


## CONTROLS

507345-01  
2/2014  
Supersedes 507144-01

## QUICK START GUIDE

iComfort Wi-Fi®  
Thermostat, Touch  
Screen, 7-Day  
Programmable

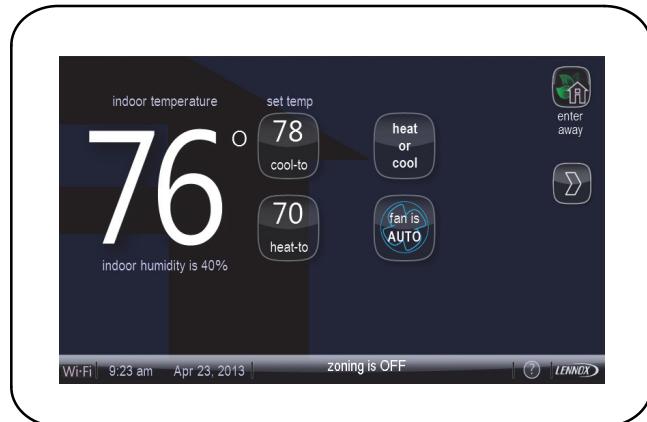

## NOTICE

Before beginning installation, note the type of equipment, number of stages, and any accessories being installed. The iComfort Wi-Fi® thermostat is a 24VAC Class 2 thermostat and requires a common wire to the thermostat to operate.

**NOTE:** Return mercury-switch thermostats, intact, to participating recycling wholesalers at hundreds of locations across the nation. For a list of participating wholesalers, see [www.nema.org/trc](http://www.nema.org/trc). If your wholesaler is not participating, ask them to start now.

## DO

- Shut off all power to system before installing.
- Read this entire document, noting which instructions pertain to your equipment & system requirements. Also, consult Installer's Guide 507145-01.
- Make sure that all wiring conforms to local and national building and electrical codes and ordinances.
- Use 18 gauge thermostat wire or larger.
- Install all sensors and accessories before powering up.

**NOTE -**If electric heat strips are used, the strips MUST be configured on the air handler control (AHC) board before beginning the "discovery" sequence as described in the Installer's Guide.

## DO NOT

- Install on voltages higher than 30VAC.
- Install on outside walls or in direct sunlight.
- Install in commercial applications unless used with approved split-system matches.

**WARNING**

Improper installation, adjustment, alteration, service or maintenance can cause property damage, personal injury or loss of life.

Installation and service must be performed by a licensed professional HVAC installer (or equivalent) or service agency.

THIS MANUAL MUST BE LEFT WITH THE  
HOMEOWNER FOR FUTURE REFERENCE

iComfort Wi-Fi® Thermostat  
INSTALLATION INSTRUCTIONS

- E. Trim 1/4" insulation from end of each wire (figure 3, wiring detail A). Insert the trimmed ends of the wires in the appropriate holes on the bottom of the thermostat's terminal block and tighten the screws to secure the wires (figure 3, wiring detail B).

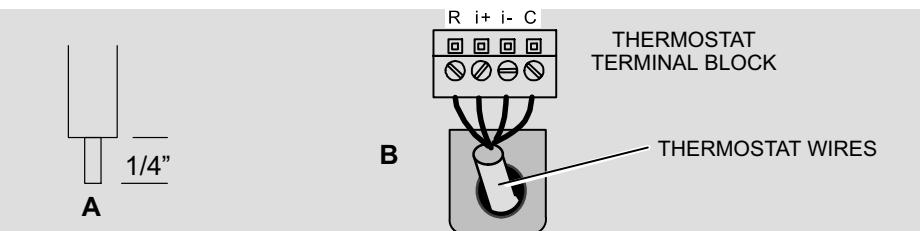


Figure 3. Wiring details

- F. After running the thermostat wire through the hole, seal to prevent air from the wall cavity from affecting the thermostat's temperature sensor.
- G. Align the tabs on the thermostat with the slots on the base, holding it at about a 45 degree angle to the wall. When the tabs seat into the slot, rotate the thermostat upward until it snaps into place (see figure 4).

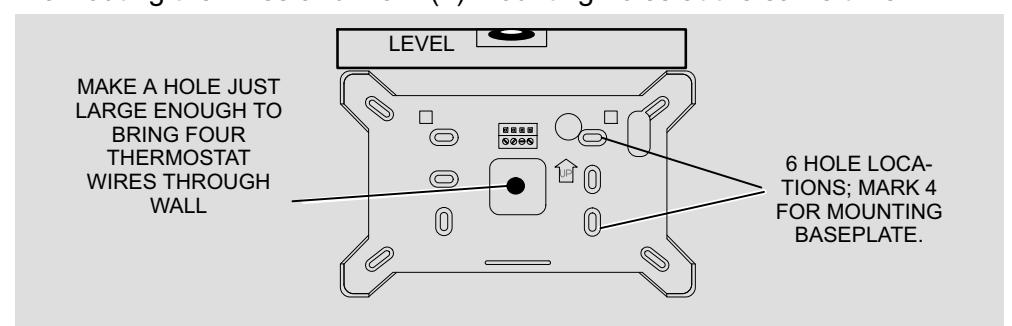


Figure 1. Hole locations

- B. Drill (4) 3/16" holes in wall for anchors. Insert wall anchors in holes (see figure 2) and tap the anchor until flush with the wall.

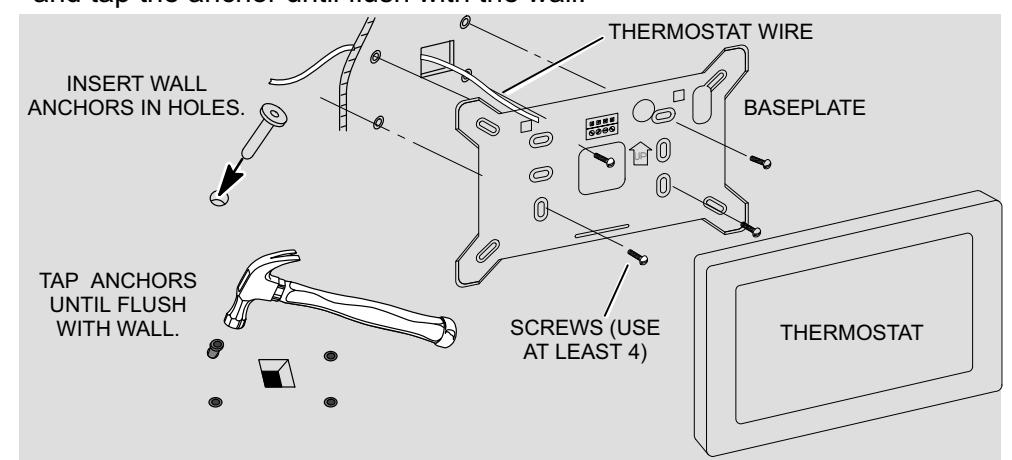


Figure 2. On-wall mounting

- C. Route the thermostat wire and feed approximately six inches of wire through the hole and into the room.
- D. Feed the thermostat wires through the opening in the baseplate. Align the thermostat mounting bracket with the anchors and fasten to wall with four screws being sure to maintain level.


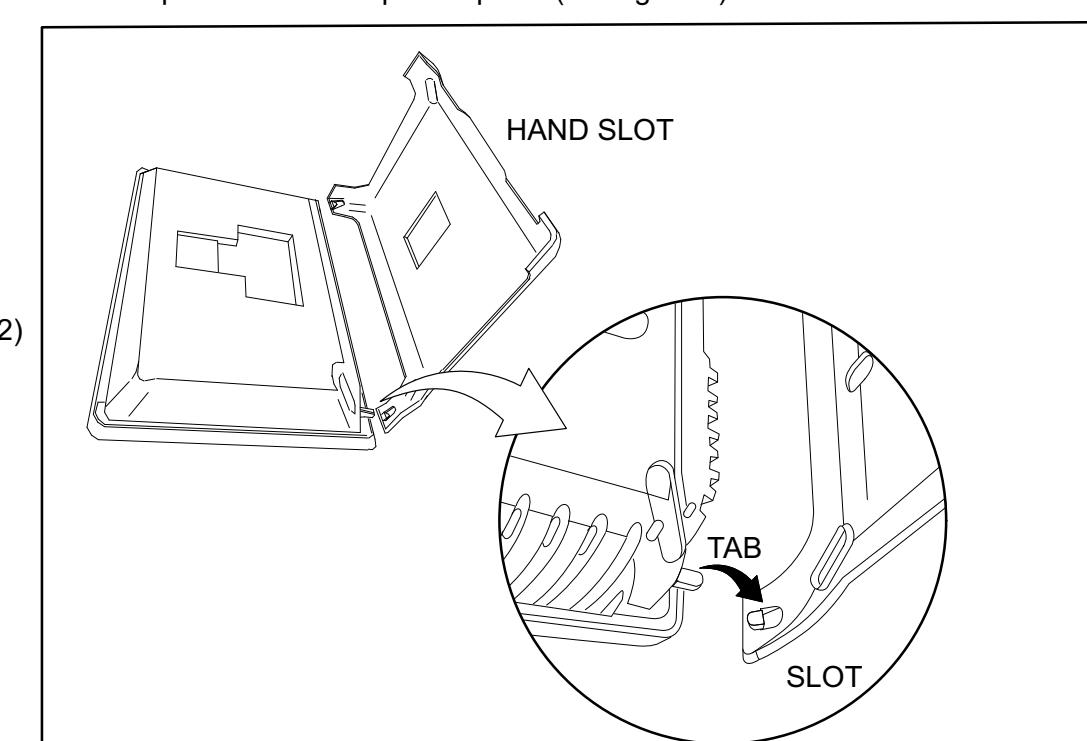



Figure 4. Installing thermostat onto bracket

## iComfort® Communicating Systems

iComfort Wi-Fi® Thermostat  
iComfort® Indoor Furnace or Air Handler  
Non-Communicating Air Conditioner

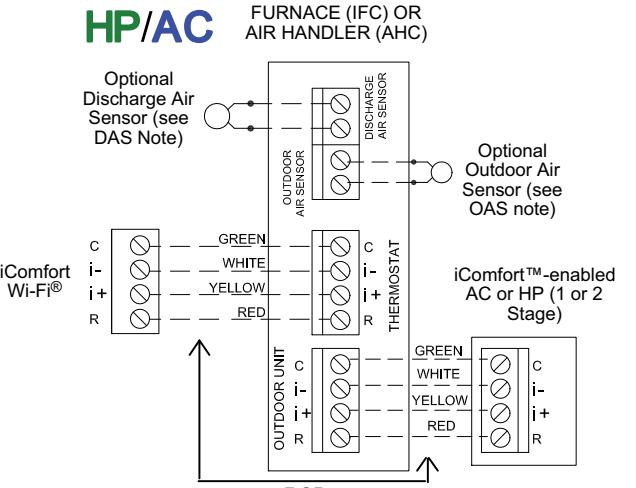


## iComfort®-enabled Indoor Unit / Non-Communicating Outdoor Unit

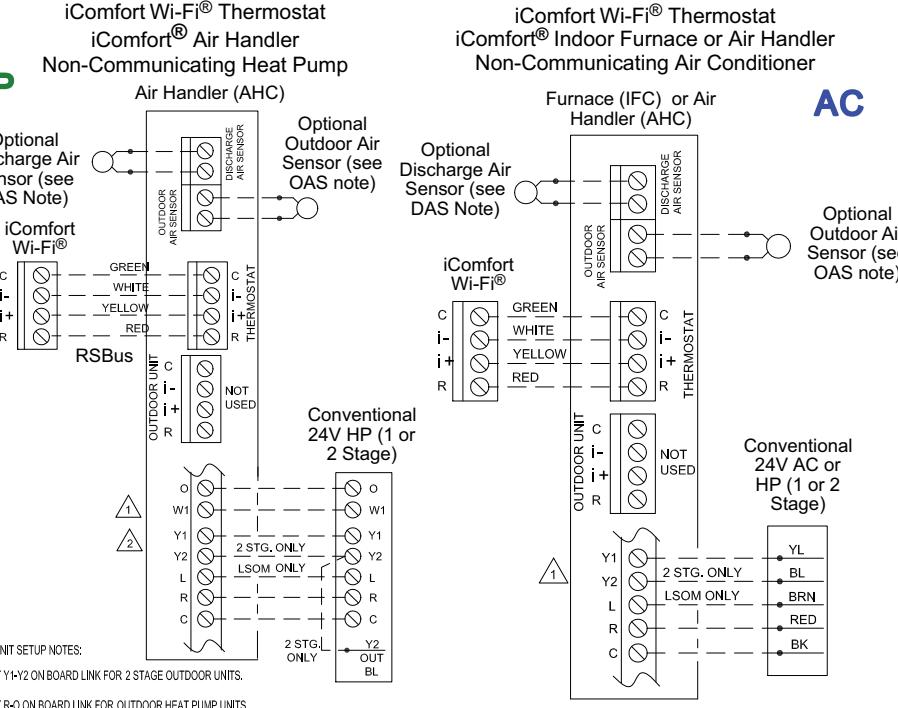

## AC

NOTE: iComfort Wi-Fi® thermostat senses humidity and controls 24VAC H output (and 120VAC HUM output) to cycle humidifier based on demand. No other control or humidistat required.


Optional outdoor air sensor for use with humidifier (if not already in the system for other functions. Built into all iComfort® outdoor units. (see OAS note)

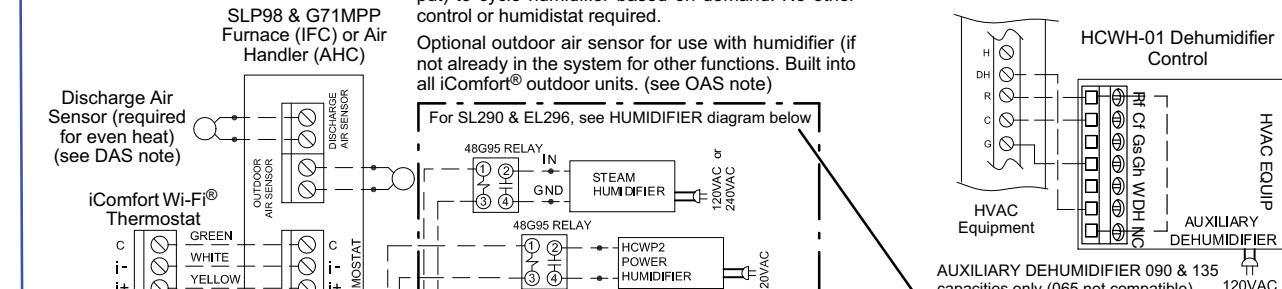


Maximum total length of all connections on the RSBus is limited to 1500ft.

Wire gauge of RSBus wire is 18.

## iComfort Wi-Fi® Thermostat, Comfort®-enabled Equipment Interface Module / indoor unit and Non-Communicating Indoor Unit

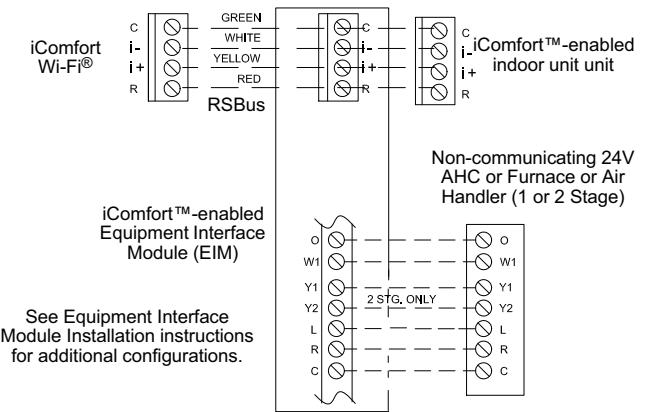

## iComfort Wi-Fi® Thermostat, iHarmony® Damper Control Module and Communicating indoor Unit

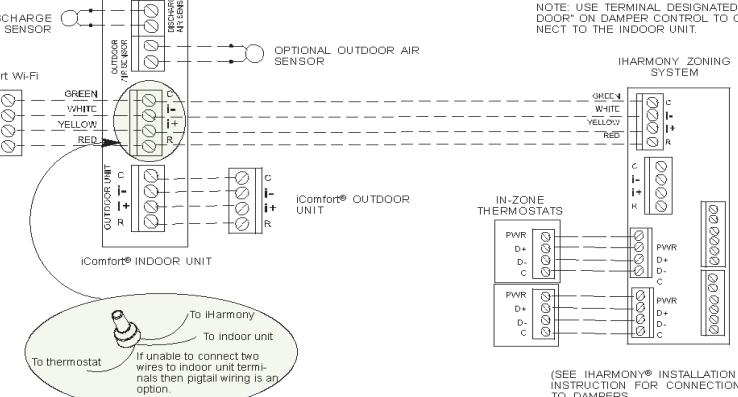


## IMPORTANT! BEFORE POWERING THERMOSTAT

NOTE - If electric heat strips are used, the strips MUST be configured on the air handler control (AHC) board before beginning the "discovery" sequence as described in the Installer's Guide.

**DAS NOTE:** The discharge air sensor is intended to be mounted downstream of the heat exchanger and air conditioning coil. It must be placed in free airflow, where other accessories (such as humidifiers, UV lights, etc.) will not interfere with its accuracy. Wiring distance between the IFC or AHC and the discharge air sensor should not exceed 10 feet when wired with 18-gauge thermostat wire.

**OAS NOTE:** The outdoor temperature sensor wiring distance between the IFC or AHC should not exceed 200 feet when wired with 18-gauge thermostat wire.


**RSBUS NOTE** Maximum total length of all connections on the RSBus is limited to 1500 ft. (450 m). Max. length between components is 300 ft. (90 m).

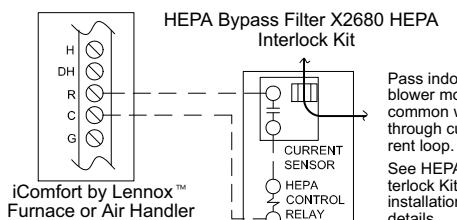


## NOTE: 24V UV LIGHT APPLICATIONS

In an iComfort™-enabled system, neither furnace nor air handler transformer will have adequate VA to power 24V UV light applications. An additional transformer for UV light applications is required. UV light wiring connections are independent of HVAC system operation; see UV light installation instructions for transformer VA requirements and wiring details.

## iComfort®-enabled Furnace or Air Handler

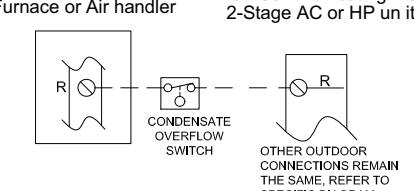

## Thermostat wire termination in iComfort® system

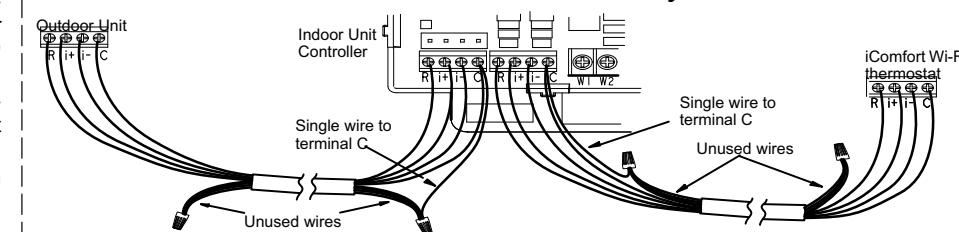

Communicating systems using the iComfort Wi-Fi® thermostat require four thermostat wires between the thermostat and the furnace/air handler control and four wires between the outdoor unit and the furnace/air handler control. When a thermostat cable with more than four wires is used, the extra wires must be properly connected to avoid electrical noise. The wires must not be left disconnected.

Use wire nuts to bundle the unused wires at each end of the cable. A single wire should then be connected to the indoor unit end of the wire bundle and attached to the "C" terminals as shown in the diagram above.

This is not an issue in non-communicating systems.

## Optional Accessories for use with any iComfort® system

NOTE: iComfort Wi-Fi® thermostat senses humidity and controls 24VAC H output (and 120VAC HUM output) to cycle humidifier based on demand. No other control or humidistat required.

Optional outdoor air sensor for use with humidifier (if not already in the system for other functions. Built into all iComfort® outdoor units. (see OAS note)

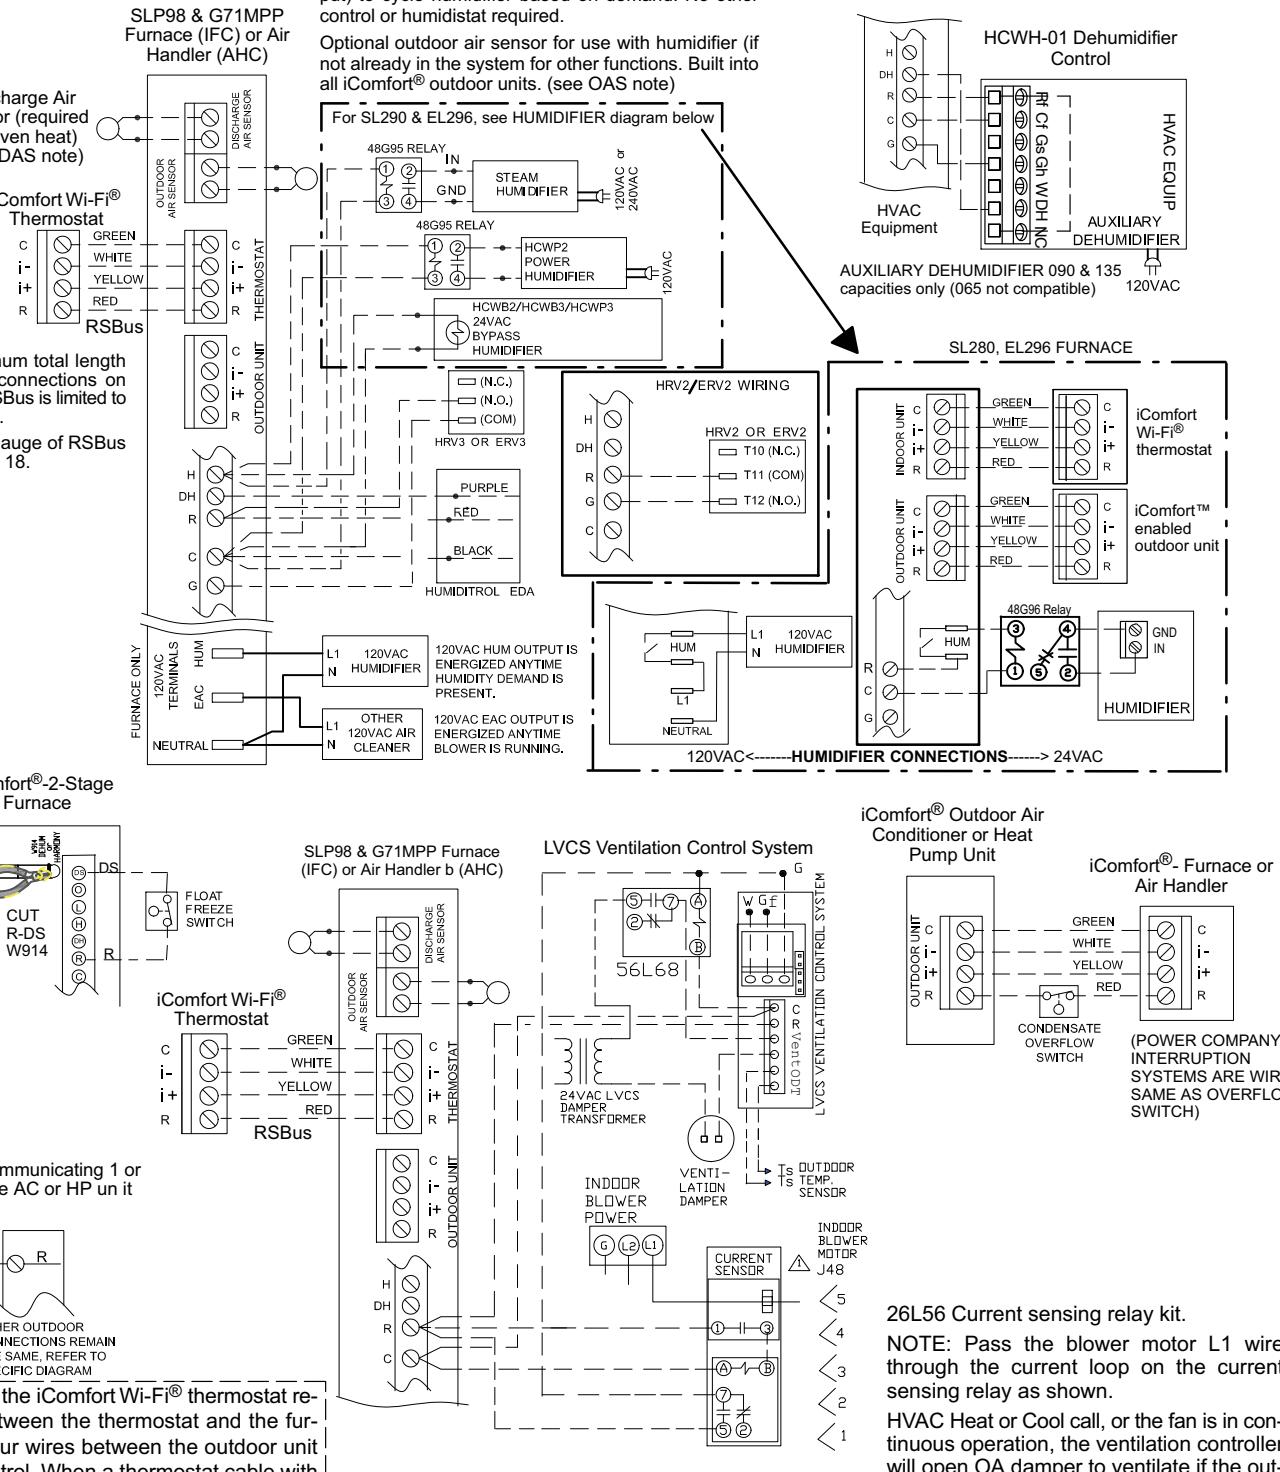


Figure 5. Wiring Diagrams